



# 2SY212B Software

## Synchronism Check Relay

relay monitoring systems pty ltd

---

Advanced Protection Devices



User Guide



Test Manual



Relay Software



MATRIXwin



# 2SY212B Relay Software

## Links to Other Documents

---

User Guide: [http://www.rmspl.com.au/userguide/2sy212\\_user\\_guide.pdf](http://www.rmspl.com.au/userguide/2sy212_user_guide.pdf)

User Guide: [http://www.rmspl.com.au/userguide/2sy212-s\\_user\\_guide.pdf](http://www.rmspl.com.au/userguide/2sy212-s_user_guide.pdf)

Software Downloads: <http://www.rmspl.com.au/digital/umatrix.htm>

## Version Control

---

Issue	Date	Summary of changes
A	2/7/14	Initial release
B		
C		
D		
E		
F		

Due to RMS continuous product improvement policy this information is subject to change without notice.  
This document is uncontrolled and subject to copyright.

Author	Checked	PDF file created	Registered & Released
MVL	SG	SG	





### **3.0 DESCRIPTION – UMX2SY212B.UMX**

#### **3.1 Standard Features**

The 2SY212-S provide a range of standard features as described in the RMS Technical Bulletins that may be downloaded from the RMS website.

#### **3.2 Special Features of this Software UMX Version**

The B UMX software supports the standard 2SY212 features.



#### 4.0 USER INTERFACE

Refer to the MATRIX Users Guide for detailed instructions on the operation of the user interface.

To download a PDF version of the guide uMatrix: [www.rmspl.com.au/digital/umatrixinfo.pdf](http://www.rmspl.com.au/digital/umatrixinfo.pdf)

To download a PDF version of the guide uMatrix-S: [www.rmspl.com.au/digital/umatrix-s\\_info.pdf](http://www.rmspl.com.au/digital/umatrix-s_info.pdf)

To download USB VCP drivers for uMATRIX-S: [www.rmspl.com.au/umatrix.htm](http://www.rmspl.com.au/umatrix.htm)

#### 5.0 LOAD SOFTWARE

Loading a UMX requires at least the following:

A PC with Windows 2000 or later and at least one USB (uMatrix-S) port.

*(Note: USB comms require drivers to be installed on your PC. See section 4.0 downloads.)*

UMatrixWin software.

A USB cable.

A general understanding of how UMX and UMP files work with the relay.

*Settable parameters will be overwritten by loading a new UMX file. They can however, be saved to a UMP file and then returned to the relay later. To learn how to do this, refer to the uMatrix User guide.*

#### 5.1 Loading the UMX

Before loading the UMX2SY212B software, ensure that it is compatible with your hardware.

Download the compatibility list from the RMS website at:

[www.rmspl.com.au/digital/compatibility.pdf](http://www.rmspl.com.au/digital/compatibility.pdf)

Ensure that the bios version in the relay matches the table in section 2.0 of this document. (If the bios version is different, you may not be able to load this UMX. Contact RMS for support.)

Load the UMX via the front panel COM port using the 'uMatrixWin' software.

Ensure that the UMX version matches the table in section 2.0.

*To interrogate for versions, press 'SET' and 'DATA' buttons simultaneously, then select 'Version Page'. Alternatively, use uMatrixWin – Options – Utilities.*

Check versions

#### 5.2 Customer Default UMP

Load customer UMP file as per the Job Card. If no UMP file is requested, write N/A in check box.

UMP file name

The Relay is now ready for field use.

SOFTWARE INSTALLED BY

DATE :

**6.0 CONNECTION DIAGRAM**

